

REMINGTON

REMINGTON®

BEARD TRIMMER FOR PROFESSIONAL CUTTING AND SHAPING



MB320C



 
 
Model No. MB320C

 
 
 
Уважаемый покупатель! Приобретаемый вами продукт Remington прошел необходимую сертификацию в соответствии с требованиями российского законодательства. Подробную информацию о номере сертификата и сроке его действия вы сможете найти на сайте

<http://www.remington-products.ru>

08/INT/MB320C Version 03/08 Part No. T22-23182
REMINGTON® Registered Trade Mark of Spectrum Brands, Inc.,
or one of its subsidiaries
VARTA Consumer Batteries GmbH & Co. KGaA
Alfred-Krupp-Str.9
73479 Ellwangen
Germany
www.remington-europe.com
© 2008 SBI

REMINGTON

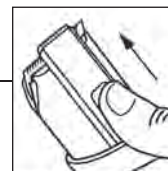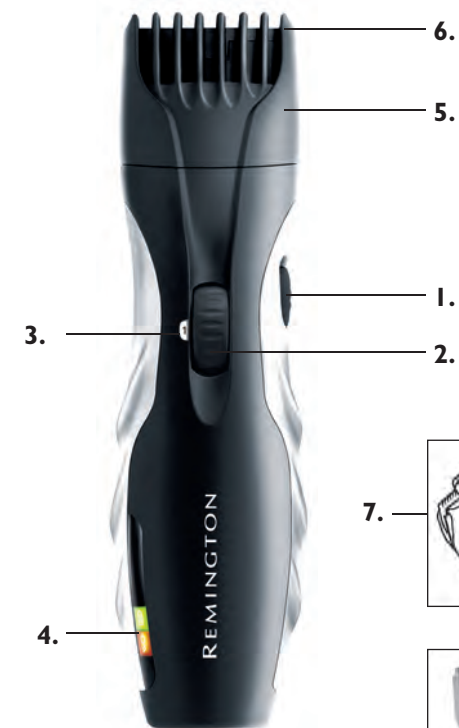

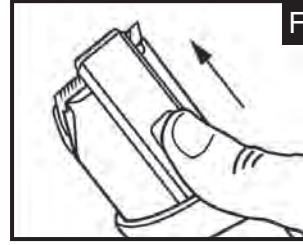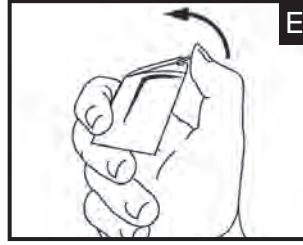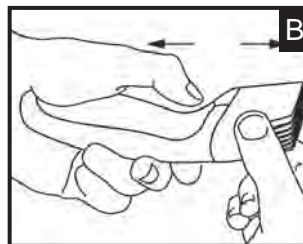

► GERMANY

► BENELUX

► FRANCE

► ITALY

► SCANDINAVIA

► AUSTRIA

► SWITZERLAND

► PORTUGAL

Central Europe

☎ 00800 / 821 700 821

Mo.-Fr. 9 a.m. – 5 p.m. Central European Time (free call)

E-Mail: service@remington-europe.com
www.remington-europe.com

► SPAIN

► MALTA

☎ Tel. 00800 821 700 82 (free call)

► GREECE

☎ Tel. 00800 49 12 91 60 (free call)

► UNITED KINGDOM

☎ Tel. +44 0800 212 438 (free call)

Rayovac Europe Ltd, Watermans House, Kingsbury Crescent, The Causeway, Staines, Middlesex, TW18 3BA, UNITED KINGDOM, www.remington.co.uk

► ČESKÁ REPUBLIKA

☎ Tel. +420 487 754 605

VARTA Baterie spol. s r. o., Jindřicha z Lipé 108, 470 01 Česká Lípa, ČESKÁ REPUBLIKA, www.cz.remington-europe.com

► IRELAND

☎ Tel. +353 (0) 1 460 4711

Remington Consumer Products, Unit 7C, Riverview Business Park, New Nangor Road, Dublin 22, IRELAND, www.remington.co.uk

► MAGYARORSZÁG

☎ Tel. +36 1 431 3600

Varta Hungária Kft., 1191 Budapest, Ady Endre út 42-44. www.hu.remington-europe.com

► POLSKA

☎ Tel. +48 22 328 11 50

Varta Baterie Sp. z o.o., ul. Fabryczna 5, 00-446 Warszawa, POLSKA, Fax +48 22 328 11 61, www.pl.remington-europe.com

► РОССИЯ

☎ Тел. +7 495 170 5401

ООО ПРОФСЕРВИС Россия, 109202, Москва, ул. 2я Карачаровская, 14а-3, www.remington-europe.com

► TÜRKİYE

☎ Tel. +90 212 659 01 24

Varta Pilleri Ticaret Ltd. Şti., İstic 28.Ada No:1 34217, Mahmutbey/İstanbul, TÜRKİYE, Fax +90 212 659 48 40, www.tr.remington-europe.com

Thank you for choosing Remington®. Our products are designed to meet the highest standard of quality, functionality and design. We hope you enjoy using your new Remington® appliance. Please read the instructions for use carefully and keep in a safe place for future reference.



CAUTION

- ◆ Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Remington®.
- ◆ Do not use this product if it is not working correctly, if it has been dropped or damaged, or dropped into water.



DESCRIPTION

1. On/Off Switch
2. 9 Position Zoom Wheel
3. Length Position Indicator
4. Charging/Recharge Indicator
5. Trimmer Comb Attachment
6. Trimmer Assembly
7. Pop-up Trimmer
8. Charging Adaptor



GETTING STARTED

■ Charging Your Beard Trimmer

Before using your trimmer for the first time, charge for 14-16 hours.

- ▶ Ensure the product is switched off.
- ▶ Connect the charging adaptor to the product and then to the mains. The charging indicator will light up.

GB

D

NL

F

E

I

S

FIN

P

SK

CZ

HUN

PL

RU

TR

RO

GR

AE

ENGLISH

Your beard trimmer cannot be overcharged. However, if the product is not going to be used for an extended period time (2-3 months), unplug it from the mains and store. Fully recharge your beard trimmer when you would like to use it again.

To preserve the life of your batteries, let them run out every six months then recharge for 14-16 hours.

■ CORDED USE

► Connect the charging adaptor to the product and then to the mains.

◆ CAUTION: Extended mains only use will result in the reduction of the battery life.



HOW TO USE

■ BEFORE YOU BEGIN

Always comb your beard or moustache with a fine comb before you start trimming.

Adjusting the Trim Length

The trimmer comb can be adjusted to give you 9 different trim lengths simply by turning the zoom wheel to the desired setting. Turn the zoom wheel clockwise for shorter length, anti-clockwise for longer length. The wheel will click into place as it reaches each setting, and the setting number will appear on the length position indicator.

SETTING	HAIR DESCRIPTION	HAIR LENGTH	
1	Stubble or cropped look	1,5 mm	0.06"
2		2,5 mm	0.1"
3	Short	4 mm	0.16"
4		5,5 mm	0.22"
5	Medium	7 mm	0.28"
6		9 mm	0.35"
7		11 mm	0.43"
8		14 mm	0.55"
9	Long	18 mm	0.71"

- ◆ Note Trimmer comb must be attached to the groomer in order to use the hair length selector.

■ TO THIN AND TAPER THE BEARD/MOUSTACHE

- ▶ Use the zoom wheel to set the trimmer comb to the desired length setting. The setting will appear on the length position indicator. If you are trimming for the first time start with the maximum trimming length setting (9).
- ▶ Turn the unit on.
- ▶ Place the flat top of the trimmer comb against the skin (DIAGRAM A)
- ▶ Slowly slide the trimmer through the hair. Repeat from different directions as necessary.
- ▶ If hair builds up in the trimmer comb during the trimming process, switch the unit off, pull off the comb and brush/rinse off (DIAGRAM B)

■ TO DEFINE THE BEARD/MOUSTACHE LINE

- ▶ Remove the trimmer comb attachment (DIAGRAM B)
- ▶ Start with edge of beard/moustache line and gently lower the trimmer blade onto your skin (DIAGRAM C). Use motions towards edge of beard/moustache line to trim to desired locations in facial area and away from beard in neck area.
- ▶ For finer shaping, raise the pop-up trimmer. Shape as desired.

■ TRIMMING EDGE OF SIDEBURNS

- ▶ Remove the trimmer comb attachment (DIAGRAM B)
- ▶ Start with edge of sideburn, and with the trimmer blades resting lightly against your skin, use motions towards edge of sideburn line to trim to desired locations in facial area.
- ▶ For finer shaping, raise the pop-up trimmer. Shape as desired.

■ TRIMMING THE NAPE OF YOUR NECK

- ◆ Note: You will need a hand mirror for this operation if performing it alone.
- ▶ Remove the trimmer comb attachment (DIAGRAM B)
- ▶ Use your fingers to lift the hair at the base of your head up off the neck. Your index finger should be covering the roots of the hairs you are lifting to prevent accidental removal by trimmer.
- ▶ With your other hand, use the trimmer as shown in (DIAGRAM D)
- ▶ Using your other hand, hold the trimmer to the base of your neck with the cutting unit facing up, and move the trimmer up the length of the neck until it touches your finger covering the hair roots at the base of your head. Be sure to move the unit slowly when performing this operation and to keep the hair roots at the base of your head out of the way of the trimmer.

■ REMOVING THE TRIMMER COMB ATTACHMENT AND CUTTING ASSEMBLY

- ▶ Hold the trimmer in one hand with your thumb firmly on the zoom wheel to keep it from turning.
- ▶ With your other hand, gently pull the trimmer comb attachment off the trimmer.
- ▶ Remove the cutting assembly by firmly pushing up on the blade with your thumb. (DIAGRAM E)

GB

D

NL

F

E

I

S

FIN

P

SK

CZ

HUN

PL

RU

TR

RO

GR

AE

ENGLISH

■ REPLACING THE CUTTER ASSEMBLY

- ▶ Hold the trimmer in one hand. With your other hand, insert the lower part of the cutter assembly into the trimmer, push down the cutter until firmly attached.

■ REPLACING THE TRIMMER COMB

- ▶ Hold the trimmer in one hand with your thumb firmly on the zoom wheel to keep it from turning. Ensure that the length position indicator is at I.
- ▶ Slide the comb/shaver down the grooves until it clicks into place.

- ◆ Note: The trimmer comb attachment can only be placed on the trimmer one way; if it does not fit properly remove and reverse it.

Tips for best results

- ▶ Beard, moustache and sideburn hairs should be dry.
- ▶ Avoid using lotions before using your trimmer. Comb your hair in the direction that it grows.
- ▶ Remove trimmer comb attachment if you are: defining hairline edges such as sideburns, trimming the nape of your neck, trimming your beard line on front of neck.



CARE FOR YOUR TRIMMER

■ CLEANING AND MAINTAINING YOUR TRIMMER

Care for your trimmer to ensure a long lasting performance. Your trimmer is fitted with high-quality, diamond like carbon coated cutting blades that are permanently lubricated. Cleaning should only be done with a soft brush.

After each use

- ▶ Turn the trimmer off.
- ▶ Remove trimmer comb attachment and cutter assembly.
- ▶ Gently brush the remaining hairs away from the trimmer comb and trimmer blade. Do not rinse the cutter assembly under water.

■ POP-UP TRIMMER

- ▶ Remove the trimmer comb attachment.
- ▶ Slide up the pop-up trimmer into operating position (DIAGRAM F)
- ▶ Brush hair from the trimmer blades and the surrounding area.

■ CLEANING CAUTIONS

- ▶ Only the trimmer comb attachment and trimmer blade may be removed from the product for cleaning.
- ▶ Cleaning should only be done with a soft brush, such as the brush supplied with the product.
- ▶ Do not use harsh or corrosive cleaners on the units or their blades.
- ▶ This trimmer is not washable. Do not rinse under water.
- ▶ Do not submerge in water as damage will occur.

■ STORAGE

- ▶ Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- ▶ Do not wrap the cord of the charging adaptor around the appliance.



TROUBLESHOOTING

The trimmer does not work when turned on:

- ▶ Trimmer must be charged for a full 14-16 hours. If this does not work, contact Remington® Service Centre.

Trimmer blades does not move:

- ▶ The cutting unit may be dirty and clogged.
- ▶ Clean and lubricate the unit.

Trimmer does not hold charge:

- ▶ Fully discharge battery by running trimmer until it stops; then follow recharging instructions. If time between recharging cycles does not increase, battery may need replacing. Contact Remington® Service Centre.



IMPORTANT SAFETY INSTRUCTIONS

WARNING – TO REDUCE THE RISK OF BURNS, ELECTROCUTION, FIRE, OR INJURY TO PERSONS:

- ▶ An appliance should never be left unattended when plugged into a power outlet.
- ▶ Keep the power plug and cord away from heated surfaces.
- ▶ Make sure the power plug and cord do not get wet.
- ▶ Do not use the product with a damaged cord. A replacement can be obtained from an International Service Centres listed at the back of this booklet.
- ▶ Use and store the product at a temperature between 15°C and 35°C.
- ▶ Only use the parts supplied with the appliance.

GB

D

NL

F

E

I

S

FIN

P

SK

CZ

HUN

PL

RU

TR

RO

GR

AE

ENGLISH

- ▶ The trimmer is not washable. If it falls into water, ensure the power outlet is switched off before removing.
- ▶ Do not submerge in water as damage will occur.
- ▶ Keep this product out of reach of children. The use of this appliance by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge can give cause to hazards. Persons responsible for their safety should give explicit instructions or supervise the use of the appliance.



PROTECT THE ENVIRONMENT



Ni-MH

The product contains a Nickel Metal Hydride cell unit. Do not dispose the product in household waste. Disposal can take place at an appropriate collection site.

- ◆ **CAUTION:** Do not put in fire or mutilate your battery packs as they may burst or release toxic materials.



For further information on recycling see www.remington-europe.com



SERVICE AND WARRANTY

This product has been checked and is free of defects. We warrant this product against any defects that are due to faulty material or workmanship for a 2 year period from the original date of consumer purchase. If the product should become defective within the warranty period, we will repair any such defect or elect to replace the product or any part of it without charge provided there is proof of purchase. This does not mean an extension of the warranty period.

In the case of a warranty simply call the Remington® Service Centre in your region.

This warranty is offered over and above your normal statutory rights.

The warranty shall apply in all countries in which our product was sold via an authorised dealer.

This warranty does not include cutters which are consumable parts. Also not covered is damage to the product by accident or misuse, abuse, alteration to the product or use inconsistent with the technical and/or safety instructions required. This warranty shall not apply if the product has been dismantled or repaired by a person not authorised by us.